

Telephone:  
 Fax:  
 VAT Registration No.:

**Name:**  
**Address:**  
**Tel - Private:**  
**Tel - Business:**  
**Tel - Mobile:**

**Manufacturer:** Ford  
**Model:**  
**Year:** 1999  
**Registration:**  
**Mileage:**  
**Job number:**  
**Date:**

A16	ABS control module
H29	ABS warning lamp
A63	AC control module
H77	AC warning lamp
H98	Airbag warning lamp
G1	Alternator
H1	Alternator warning lamp
A1	Audio unit
31	Battery -
30	Battery +
S133	Boot lid/tailgate contact switch
H54	Boot lid/tailgate warning lamp
H18	Brake fluid level warning lamp
S33	Brake fluid level warning lamp switch
H100	Catalytic converter system warning lamp
A155	Catalytic converter temperature sensor module
S156	Central locking switch, passenger door
A94	Combination control module/relay
S6	Combination switch
A15	Cruise control module
S226	Door contact switch, driver
S227	Door contact switch, left rear
S228	Door contact switch, passenger
S229	Door contact switch, right rear
H52	Door open warning lamp, left or single
H53	Door open warning lamp, right
EP1	Earth point 1
EP10	Earth point 10
EP11	Earth point 11
EP12	Earth point 12
EP13	Earth point 13
EP21	Earth point 21
EP4	Earth point 4
EP6	Earth point 6
EP7	Earth point 7

A35	Engine control module (ECM)
B58	Engine coolant 'low' sensor
H36	Engine coolant 'low' warning lamp
P4	Engine coolant temperature gauge
B4	Engine coolant temperature gauge sensor
S26	Engine oil level warning lamp switch
H88	Engine oil pressure warning buzzer
H5	Engine oil pressure warning lamp
P3	Fuel gauge
B3	Fuel gauge tank sensor
H15	Fuel 'low' warning lamp
F	Fuse
H25	Glow plug warning lamp
H17	Handbrake ON warning lamp
S35	Handbrake warning lamp switch
K6	Hazard warning lamps relay
H2	Headlamp high beam warning lamp
K1	Headlamp relay
S3	Headlamp switch
15	Ignition switch - ignition ON
A162	Immobilizer control module
H6	Indicator warning lamp, left or single
H7	Indicator warning lamp, right
A5	Instrument panel
E11	Instrument panel lamp(s)
A75	Instrumentation control module
B61	Outside air temperature sensor
H65	Seat belt warning buzzer
H32	Seat belt warning lamp
H51	Side lamps ON warning lamp
A198	Supplementary restraint system (SRS) control module
P7	Tachometer
H46	Tail lamp failure warning lamp
H24	Trailer warning lamp
A19	Trip computer
S318	Trip meter reset switch
B33	Vehicle speed sensor (VSS)
P9	Vehicle speedometer
H33	Windscreen washer fluid 'low' warning lamp
S136	Windscreen washer fluid 'low' warning lamp switch

bl = blue	br = brown	el = cream	ge = yellow
gn = green	gr = grey	nf = neutral	og = orange
rs = pink	rt = red	sw = black	vi = violet
ws = white	hbl = light blue	hgn = light green	rbr = maroon
x = braided cable	y = high tension	z = non-cable connection	

**NOTE: In certain diagrams (Citroen, Peugeot & Renault), colour codes are replaced by numbers which are used to identify a particular cable and not the colour. In this instance, the cables will be numbered at each end close to the harness connector.**

